

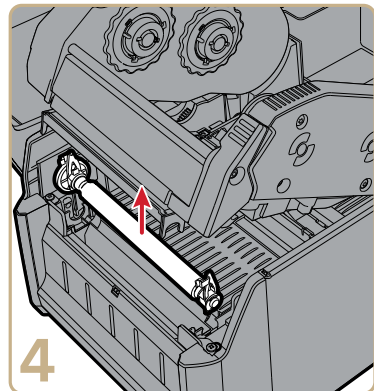
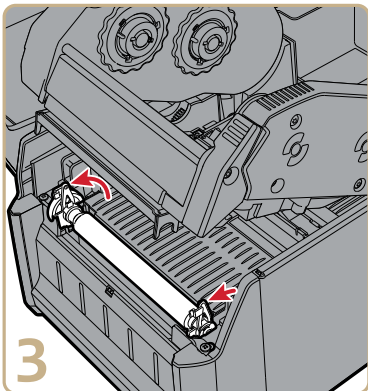
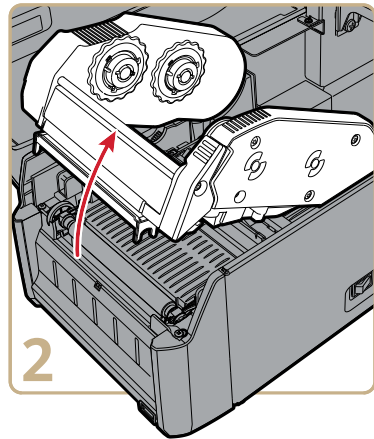
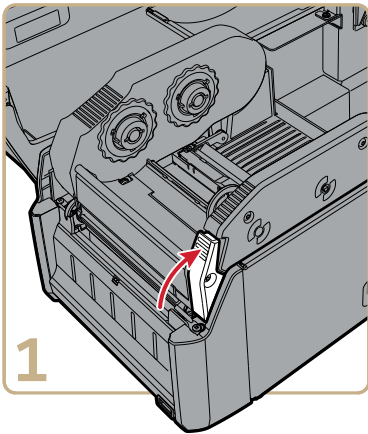
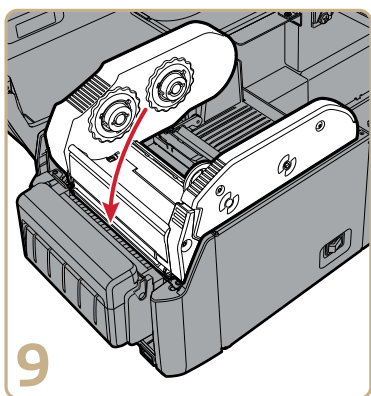
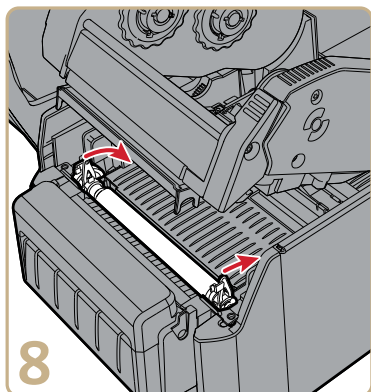
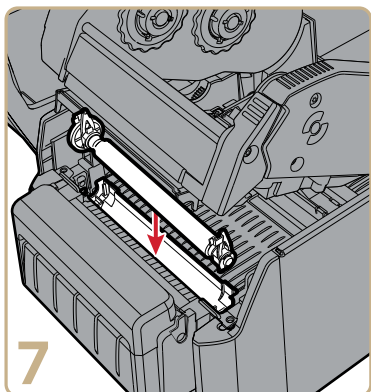


PD Series

Cutter Installation Instructions

Turn the printer off and disconnect the power cable before you begin. Do not touch print head while installing this accessory. For more information on using this accessory, see the printer user manual.

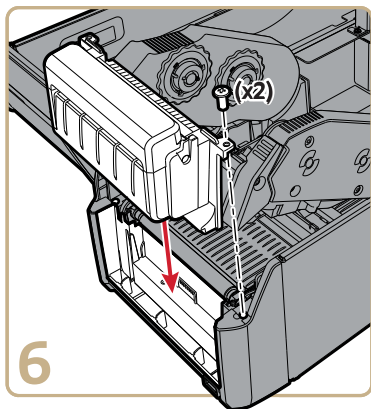

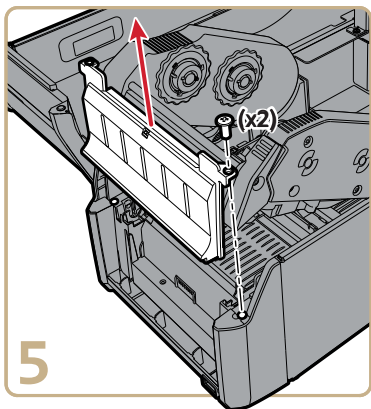

Intermec
by Honeywell



PD Series Cutter Installation Instructions

* 931 - 126 - 001 *

P/N 931-126-001