



VULCAN RFID™

Iron USB Reader QUICK START GUIDE

In The Box: **Vulcan RFID™ Iron USB Reader & USB Cable**

Step 1: Connect

Connect the reader to a Windows PC or laptop using the USB cable. The computer should recognize the device. Blue lights on the side of the reader illuminate when it receives power.

Step 2: Download Software

Download software to interact with the reader. Options include:

Vulcan RFID™ UHF Tag Read and Write Software

Simplify your workflow. Read and encode RFID tags with ease.

rfidatl.as/vulcan-software

Universal Reader Assistant

Free demo software for basic reader functionality

rfidatl.as/URA

ThingMagic Mercury API

For custom software development

rfidatl.as/mercury-api

Support

For additional information and assistance, please scan the QR code or visit rfidatl.as/iron-support.



Build Your System with Vulcan RFID™

Vulcan RFID™ offers a broad range of innovative products that enable you to reach and sustain high levels of RFID performance. These products are designed to help you plan, test, and prove ROI for a variety of applications.



Antennas

Quality UHF RFID antennas that maximize the RF performance and RFID system coverage area.



Cables

Cables tailored to your needs with custom builds based on your desired length, connectors, and thickness.



Tags

A wide selection of small to large RFID tags, built to withstand environments ranging from mild to extreme.



Inlays & Labels

A variety of form factors and IC options ideal for a wide range of applications.



Accessories & Hardware

Hardware and accessories to support and complete your system.

Software

Simplify your workflow.
Read and encode RFID tags with ease.

vulcanRFID.com

Specifications

Product Name: Vulcan RFID™ Iron USB Reader
Product SKU: VUL-USB-IRON-INTANT-ENC
Product Region: FCC (917.4 - 927.2 MHz)